




1988 Transaxle Assembly Models ZTR 427 / ZTR 428

1988 Body Assembly Models ZTR 427 / ZTR 428

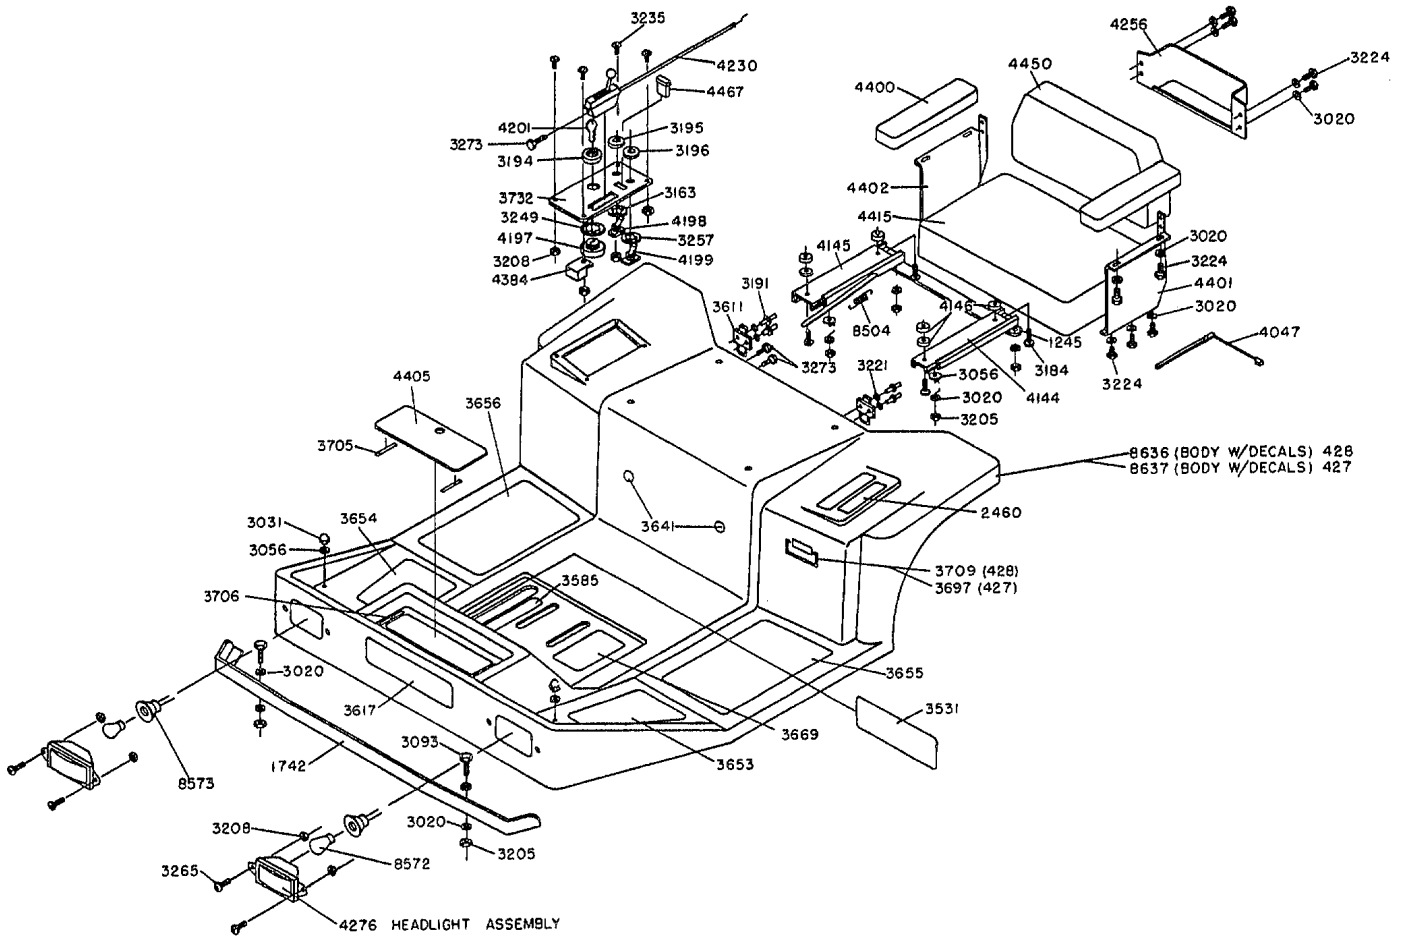


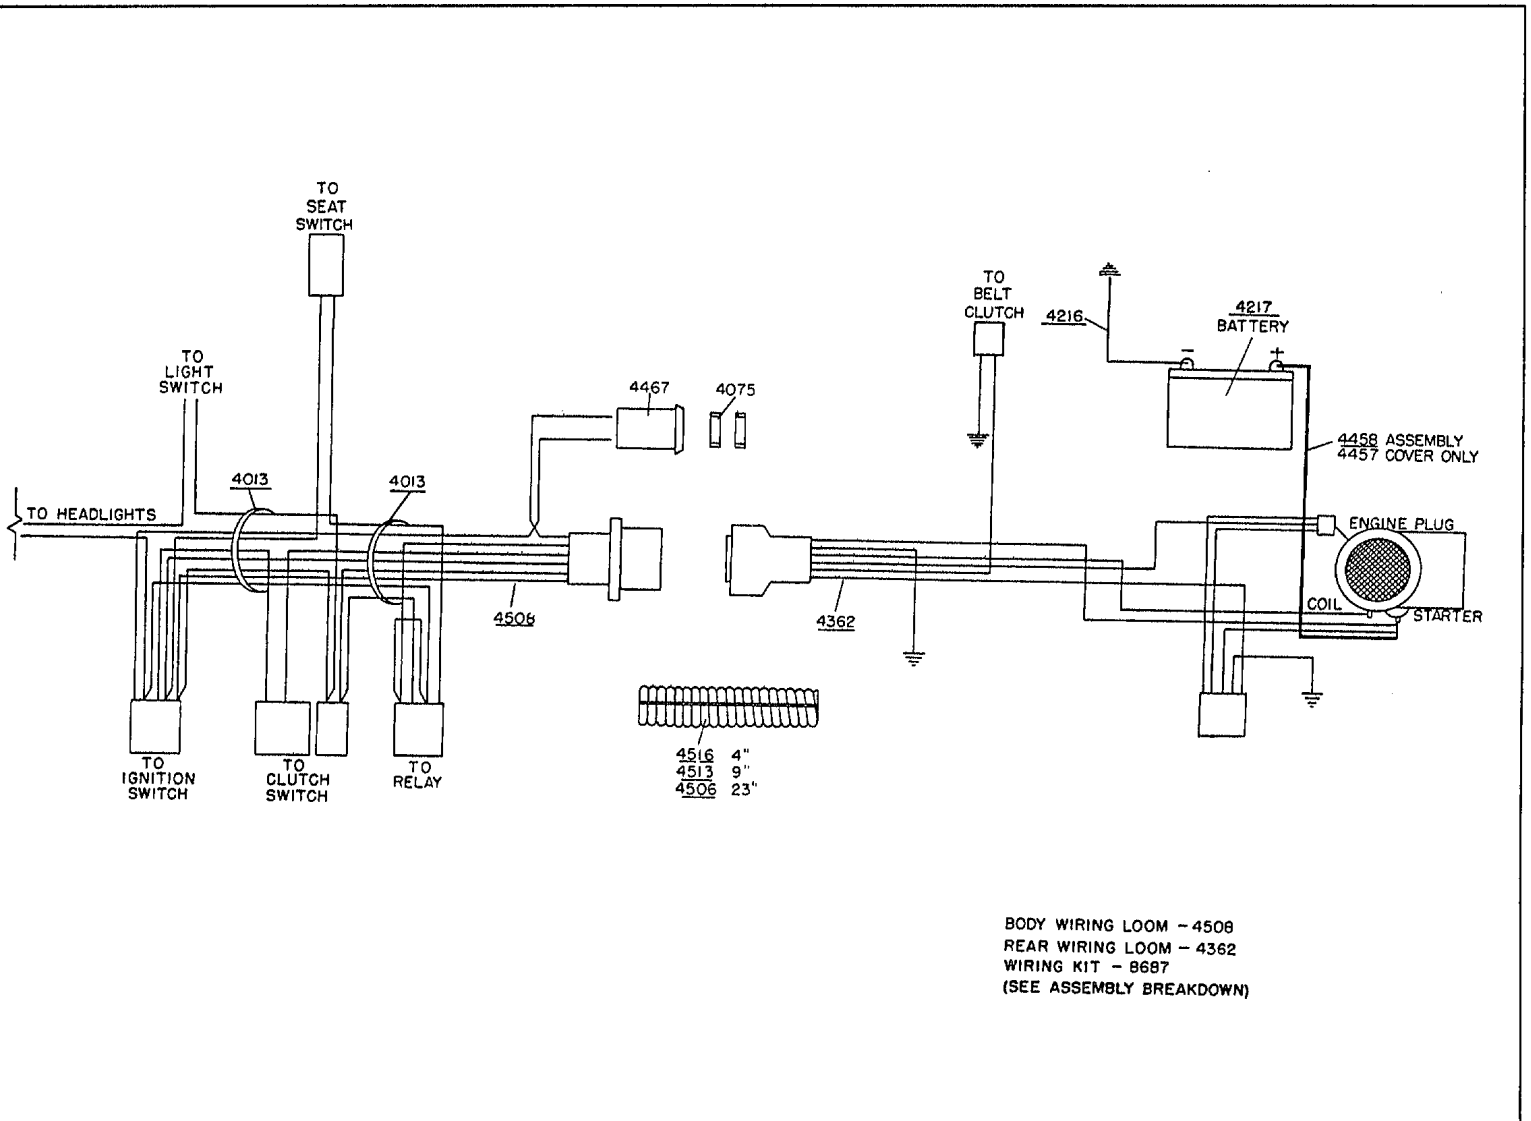

1988 Wiring Assembly Model ZTR 427

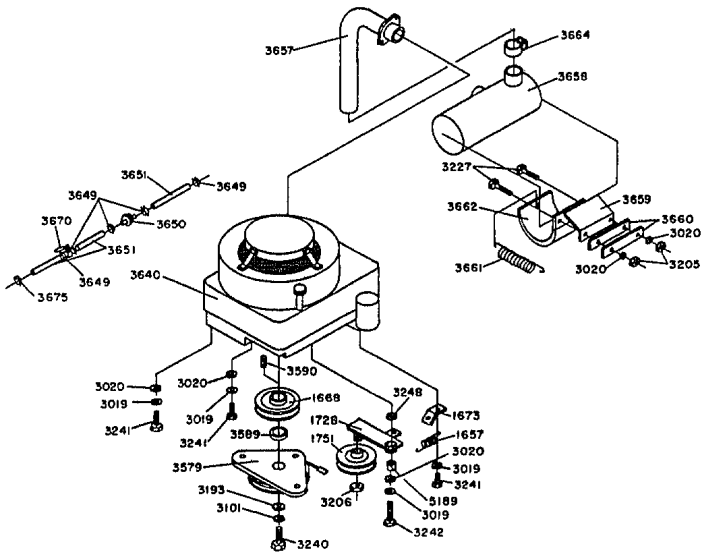

427 ONLY

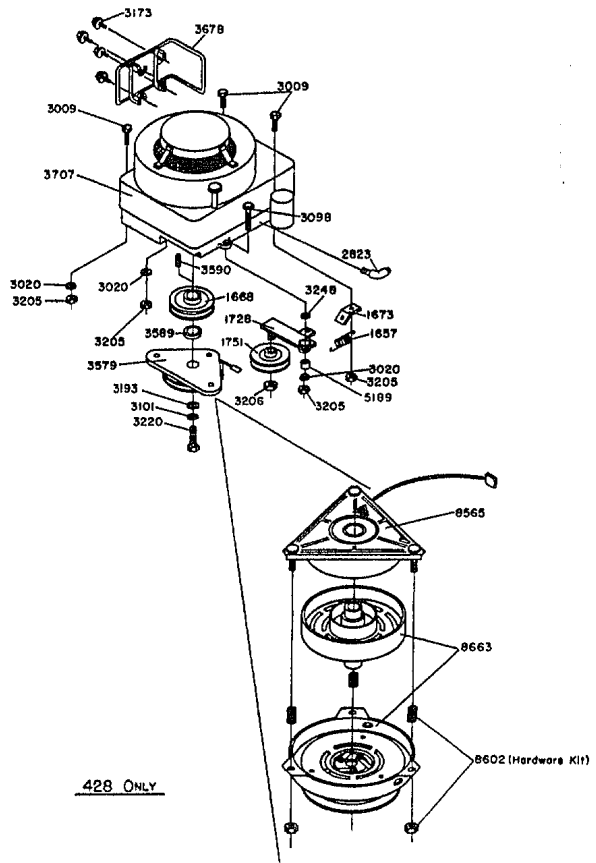

428 ONLY

1988 Engine Assembly Models ZTR 427 / ZTR 428