



1988 Transaxle Assembly Models ZTR 427 / ZTR 428

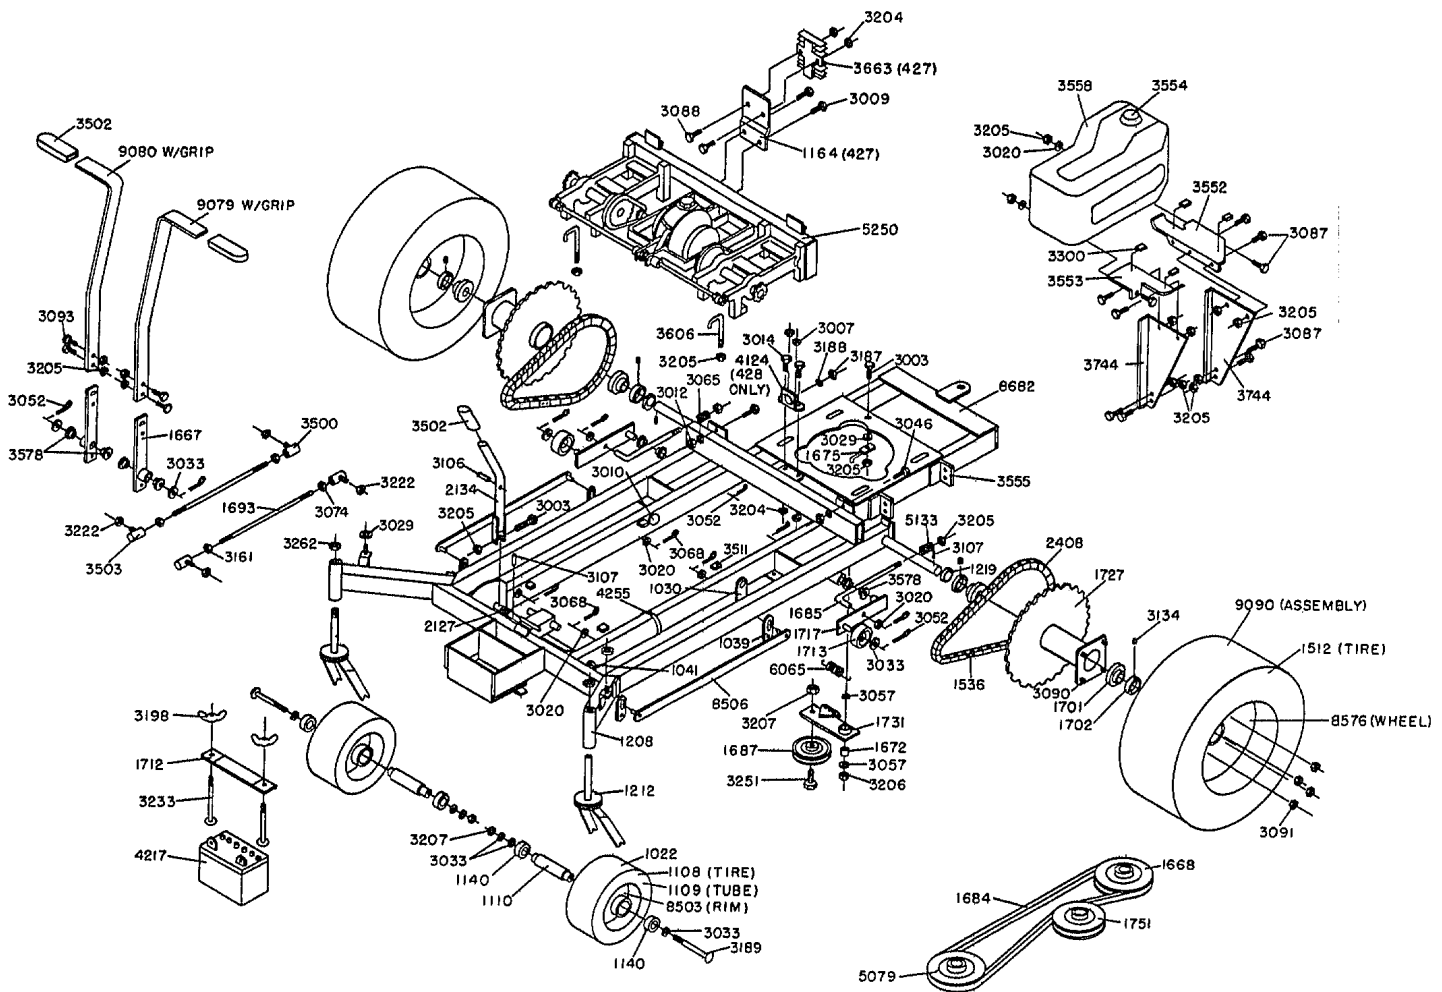


1988 Chassis Assembly Models ZTR 427 / ZTR 428


1988 Body Assembly Models ZTR 427 / ZTR 428

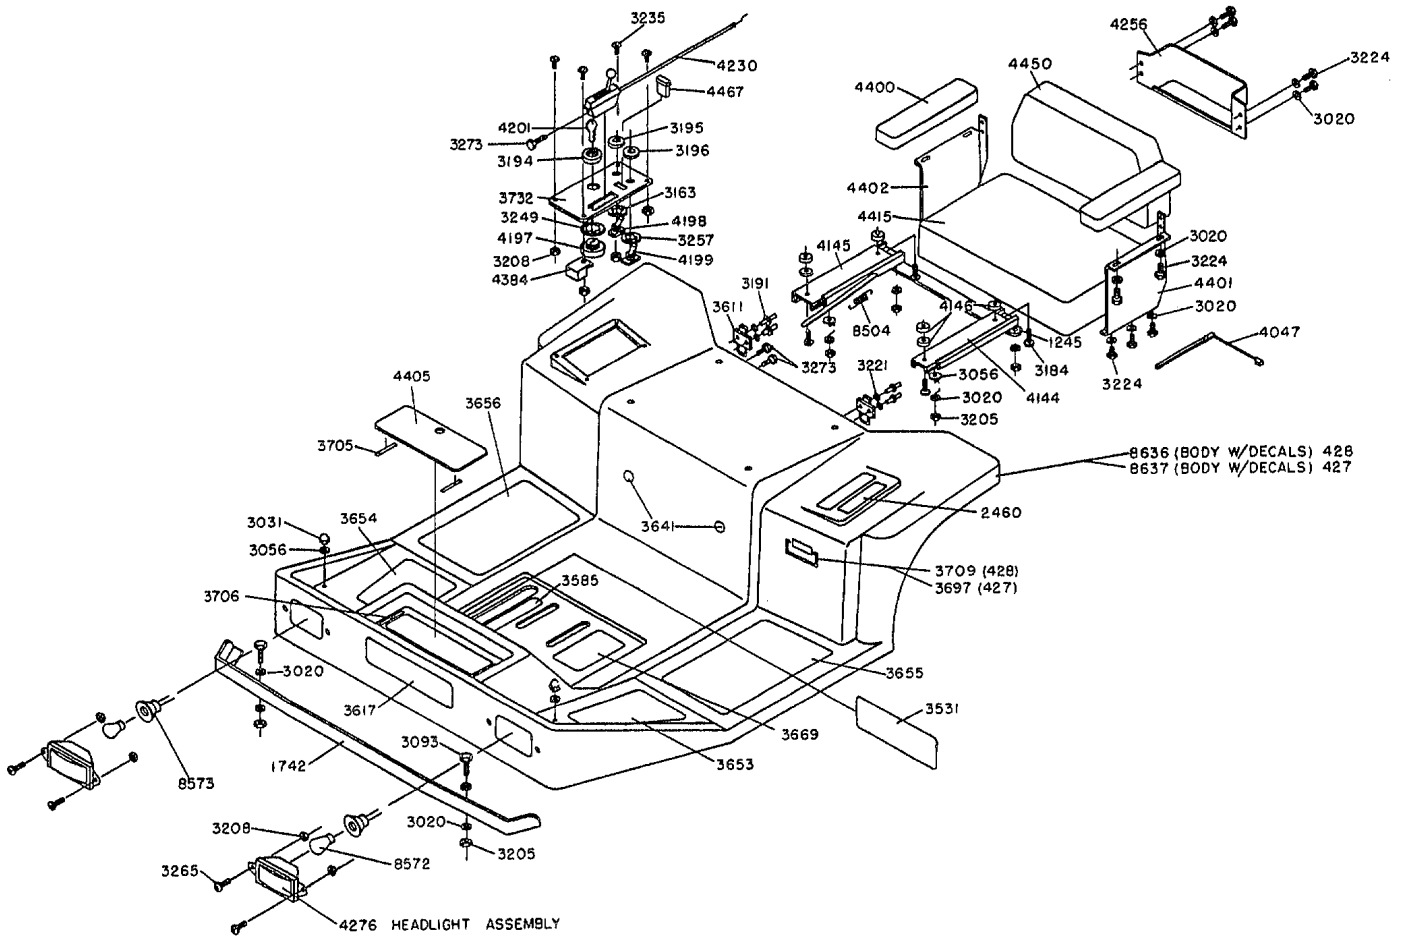


1988 Wiring Assembly Model ZTR 428

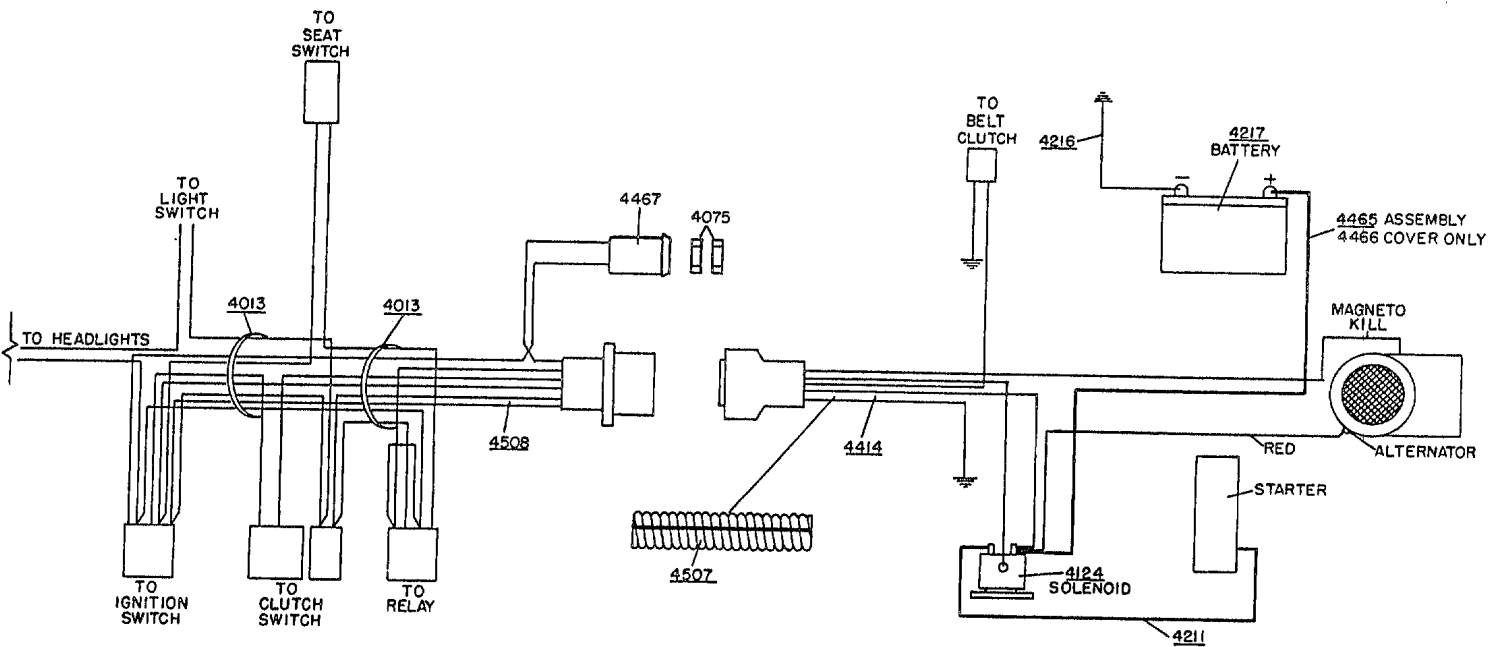

BODY WIRING LOOM - 4508
 REAR WIRING LOOM - 4414
 WIRING KIT - 8686
 (SEE ASSEMBLY BREAKDOWN)

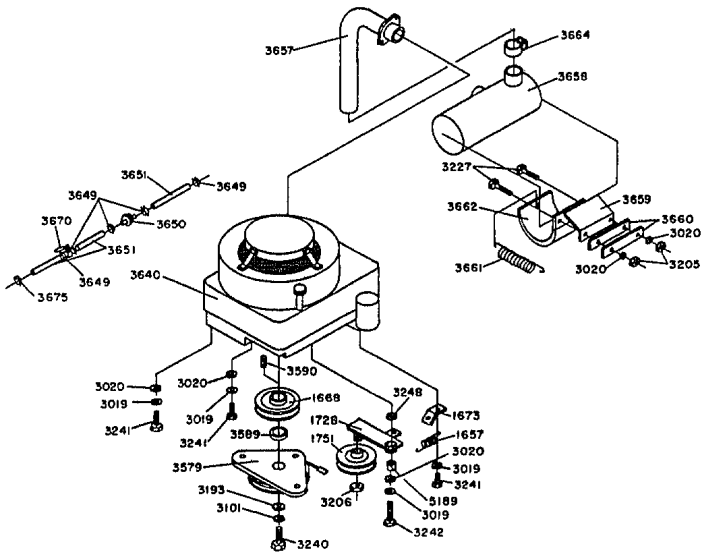

427 ONLY

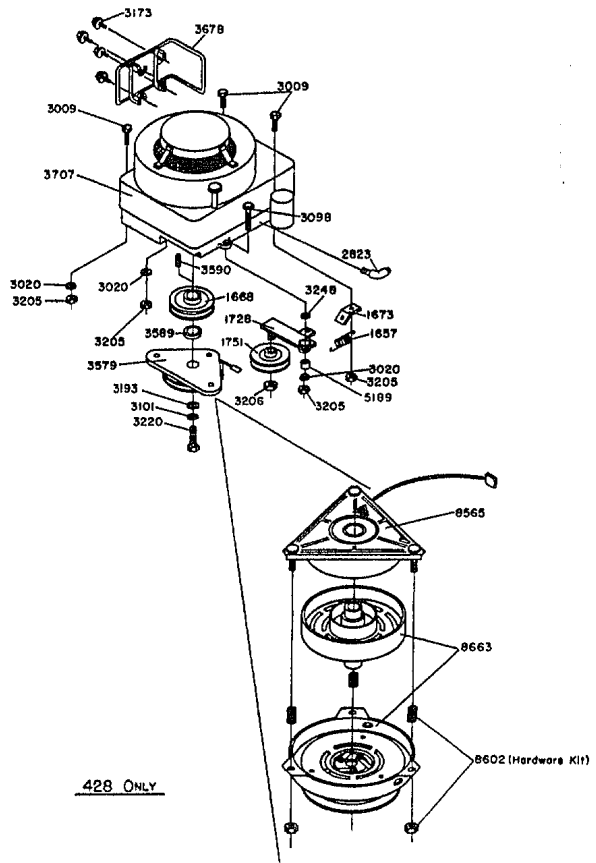

428 ONLY

1988 Engine Assembly Models ZTR 427 / ZTR 428