



1988 Transaxle Assembly Models ZTR 308/ZTR 311

Part No. 2575

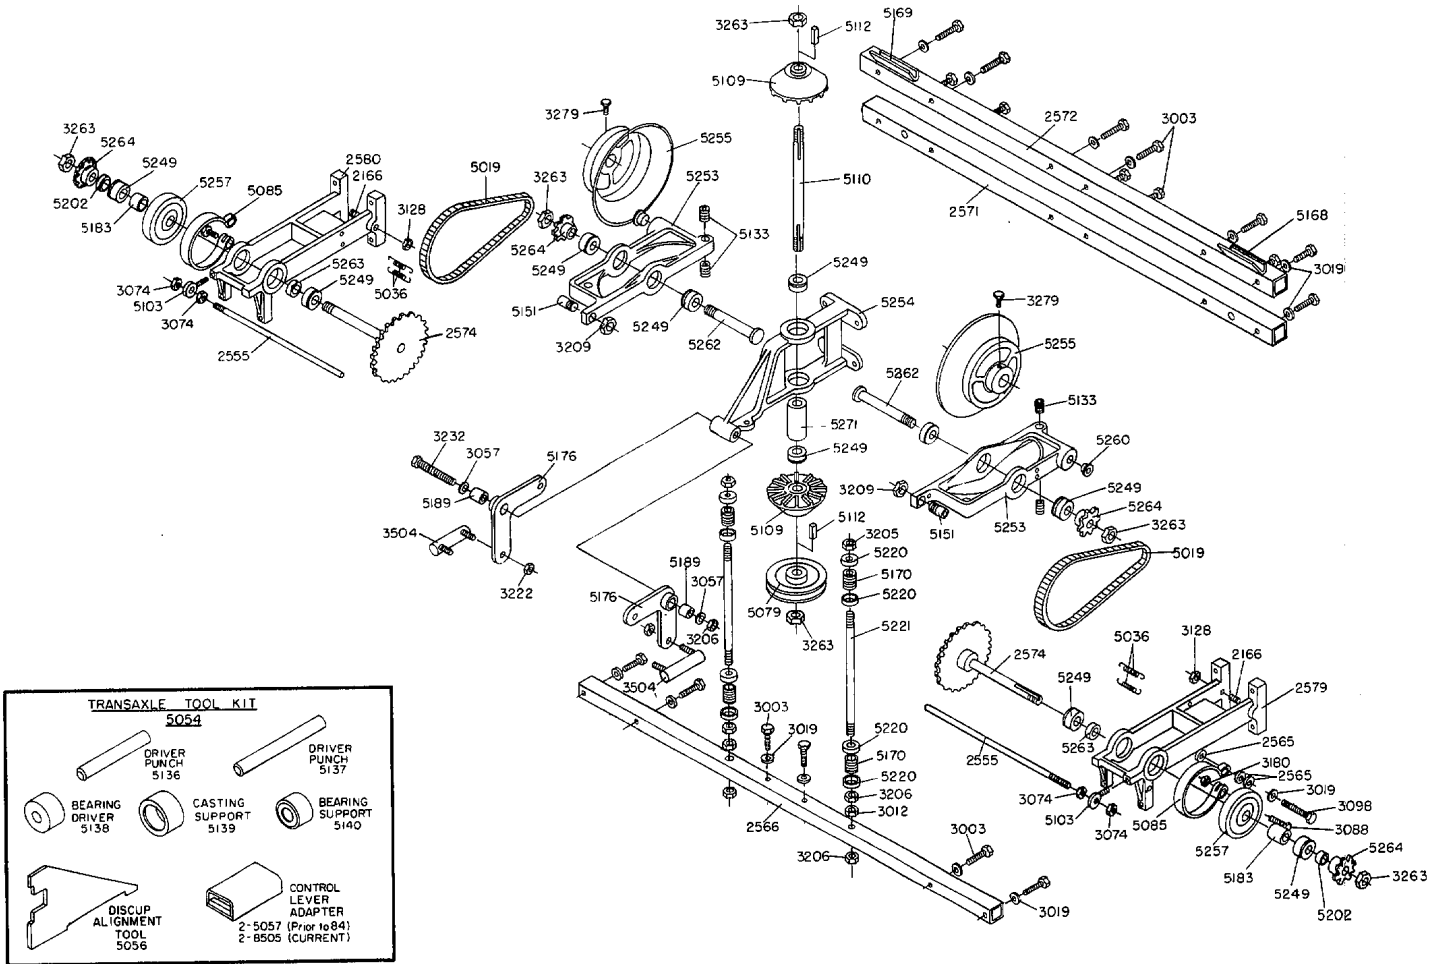


Part No. 2575

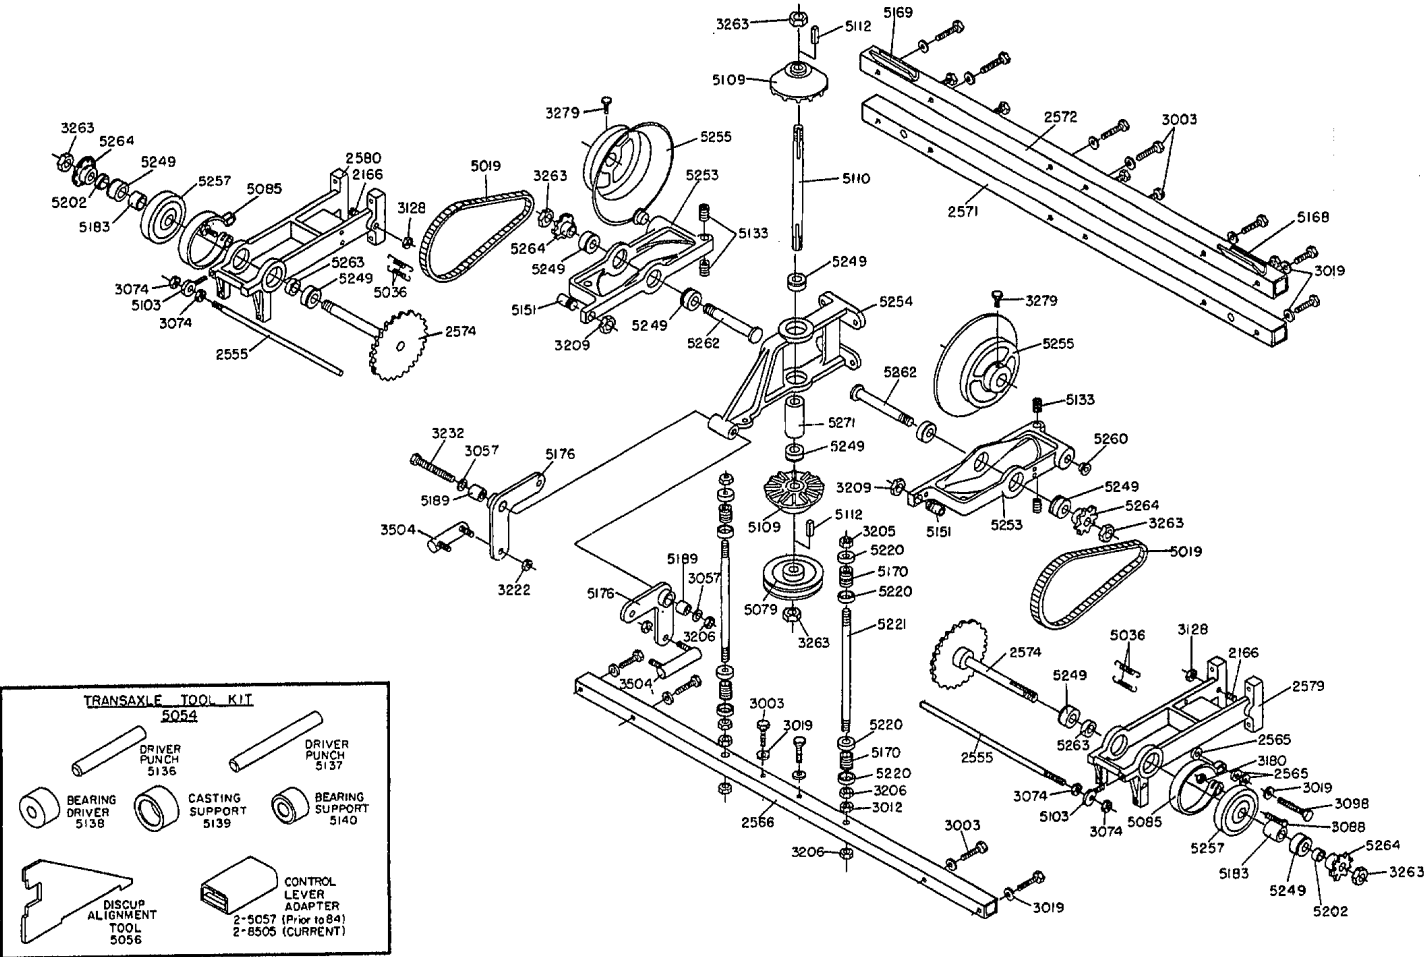


1988 Transaxle Assembly Models ZTR 308 / ZTR 311

1988 Chassis Assembly Models ZTR 308 / ZTR 311

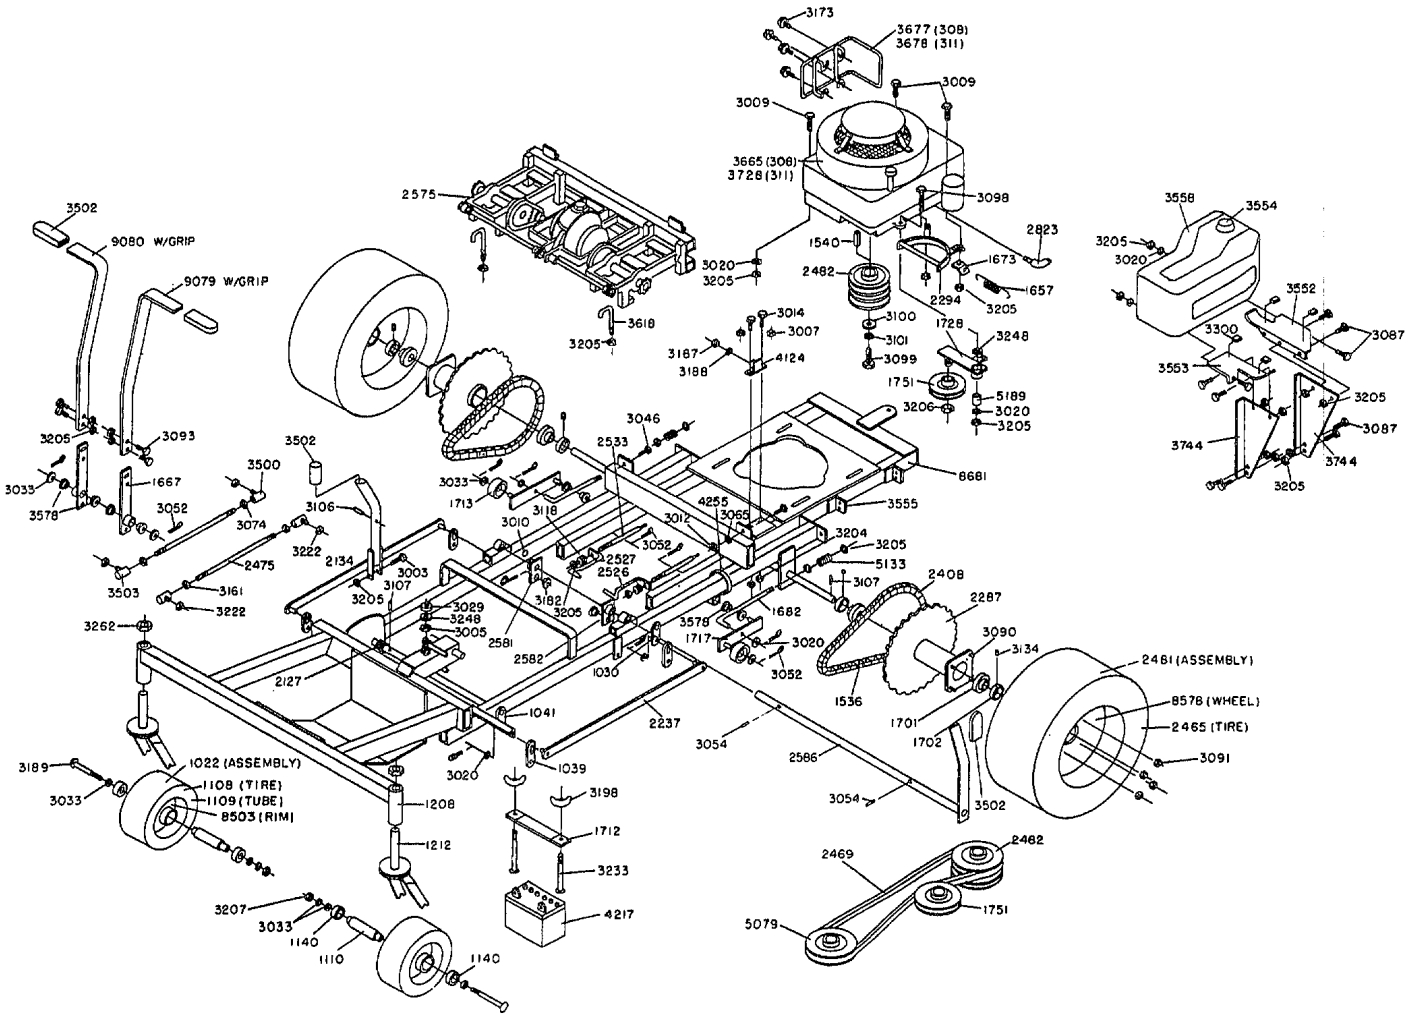


Part No. 8681

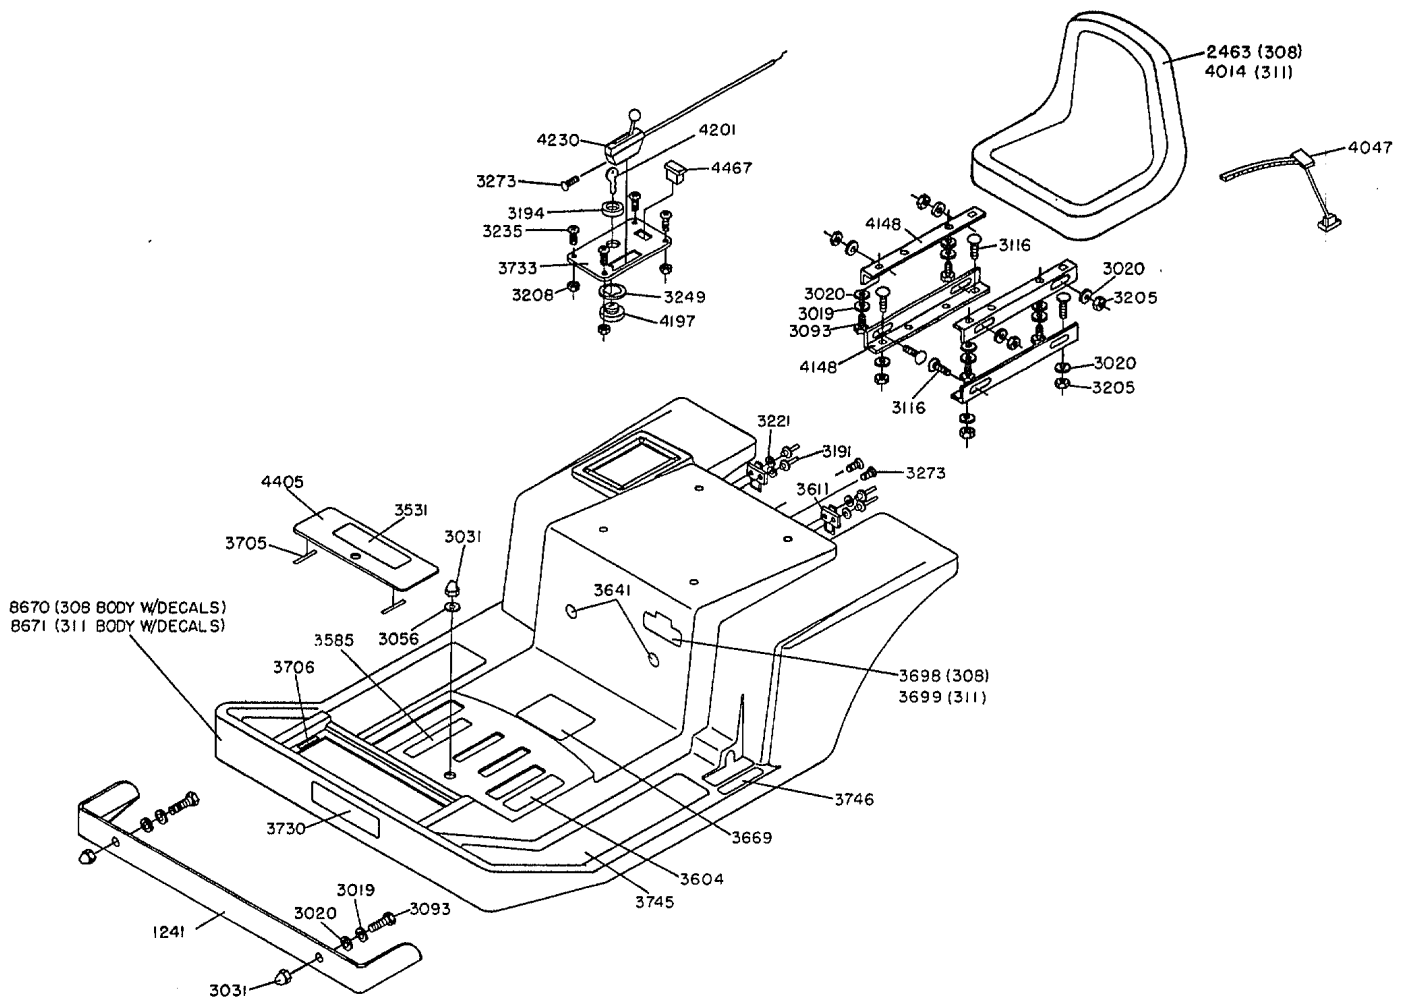

1988 Body Assembly Models ZTR 308 / ZTR 311

1988 Wiring Assembly Models ZTR 308 / ZTR 311

Part No. 2845

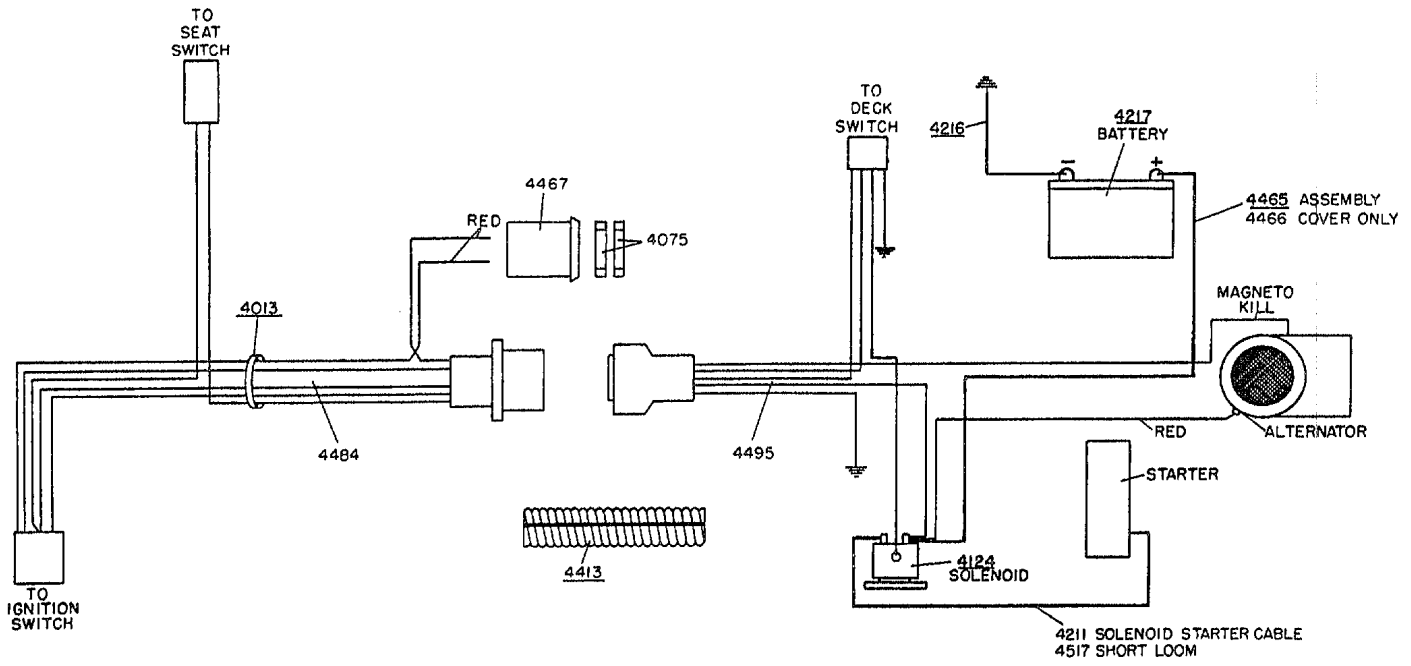

BODY WIRING LOOM - 4484
REAR WIRING LOOM - 4495
WIRING KIT (308-311)-8669
(SEE ASSEMBLY BREAKDOWN)